

TABLE 2.2B NAV 122 REAR PANEL CONNECTIONS

Connection

See Note 1

Function

NAV Power

Refer to Section 2.4.2.1

6 and 25	_____	Switched 14/28V Output
7 and 26	_____	14/28 Vdc Input From Circuit Breaker
9	_____	Pilot Lights, 28V
16	_____	14V Input
19	_____	Ground (REAR SUPPORT STUD)
27	_____	Pilot Lights, 14V

Audio


Refer to Section 2.4.2.2

8	_____	Auxiliary Audio Input
31	_____	30 mW Audio Output
36	_____	50 mW Audio Output

ARINC Channeling

Refer to Section 2.4.2.3

4	_____	C MHz
5	_____	B MHz
13	_____	A kHz
14	_____	B kHz
15	_____	E kHz
22	_____	E MHz
23	_____	D MHz
24	_____	A MHz
32	_____	D kHz
33	_____	C kHz
34	_____	Y Channel

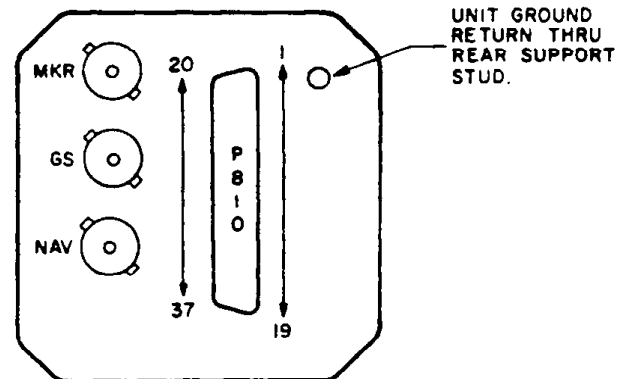

REAR VIEW

Marker Beacon

Refer to Section 2.4.2.5

1	_____	Lamp Dimming
2	_____	Audio Mute
3	_____	14/28 Vdc Input From Circuit Breaker
20	_____	HI-LO Sensitivity
21	_____	Audio Output

Autopilot and Indicators

Refer to Section 2.4.2.5 and 2.4.2.7

10	_____	+FROM
11	_____	+GS Flag
28	_____	+LEFT
29	_____	4V Reference (+ TO, - GS Flag, + Right, and + GS Down)
30	_____	+GS UP

Miscellaneous

Refer to Sections 2.4.2.4 and 2.4.2.6

12	_____	VOR/LOC (NARCO)
17	_____	VOR/LOC (ARINC)
18	_____	GS/LOC Activate