


NAV Indicator

**TERRA
TRI NAV C**

Connector

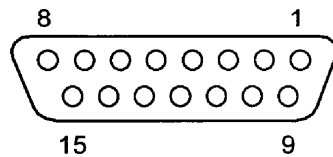

Circuit	Pin #	Notes
- G/ S FLAG INPUT	13	
+ DOWN INPUT	12	
+ G/ S FLAG INPUT	14	
+ LEFT OUTPUT	9	Note 1
+ RIGHT OUTPUT.....	3	Note 1
+ UP INPUT.....	4	
A/ C GROUND.....	10	
LORAN - FLAG.....	11	
LORAN - LEFT (OR COMMON).....	5	
LORAN + FLAG.....	15	
LORAN + RIGHT	6	
NAV 1 INPUT.....	8	
NAV 1 INVERT	7	Note 2
NO CONNECTION	2	
SWITCHED POWER INPUT +11-+32 VDC	1	

Notes

1. Autopilot output.
2. Ground with TN200 and ARINC NAV outputs. Open if signal 180 deg out of phase.

For familiarization only. Consult the manufacturers current data.