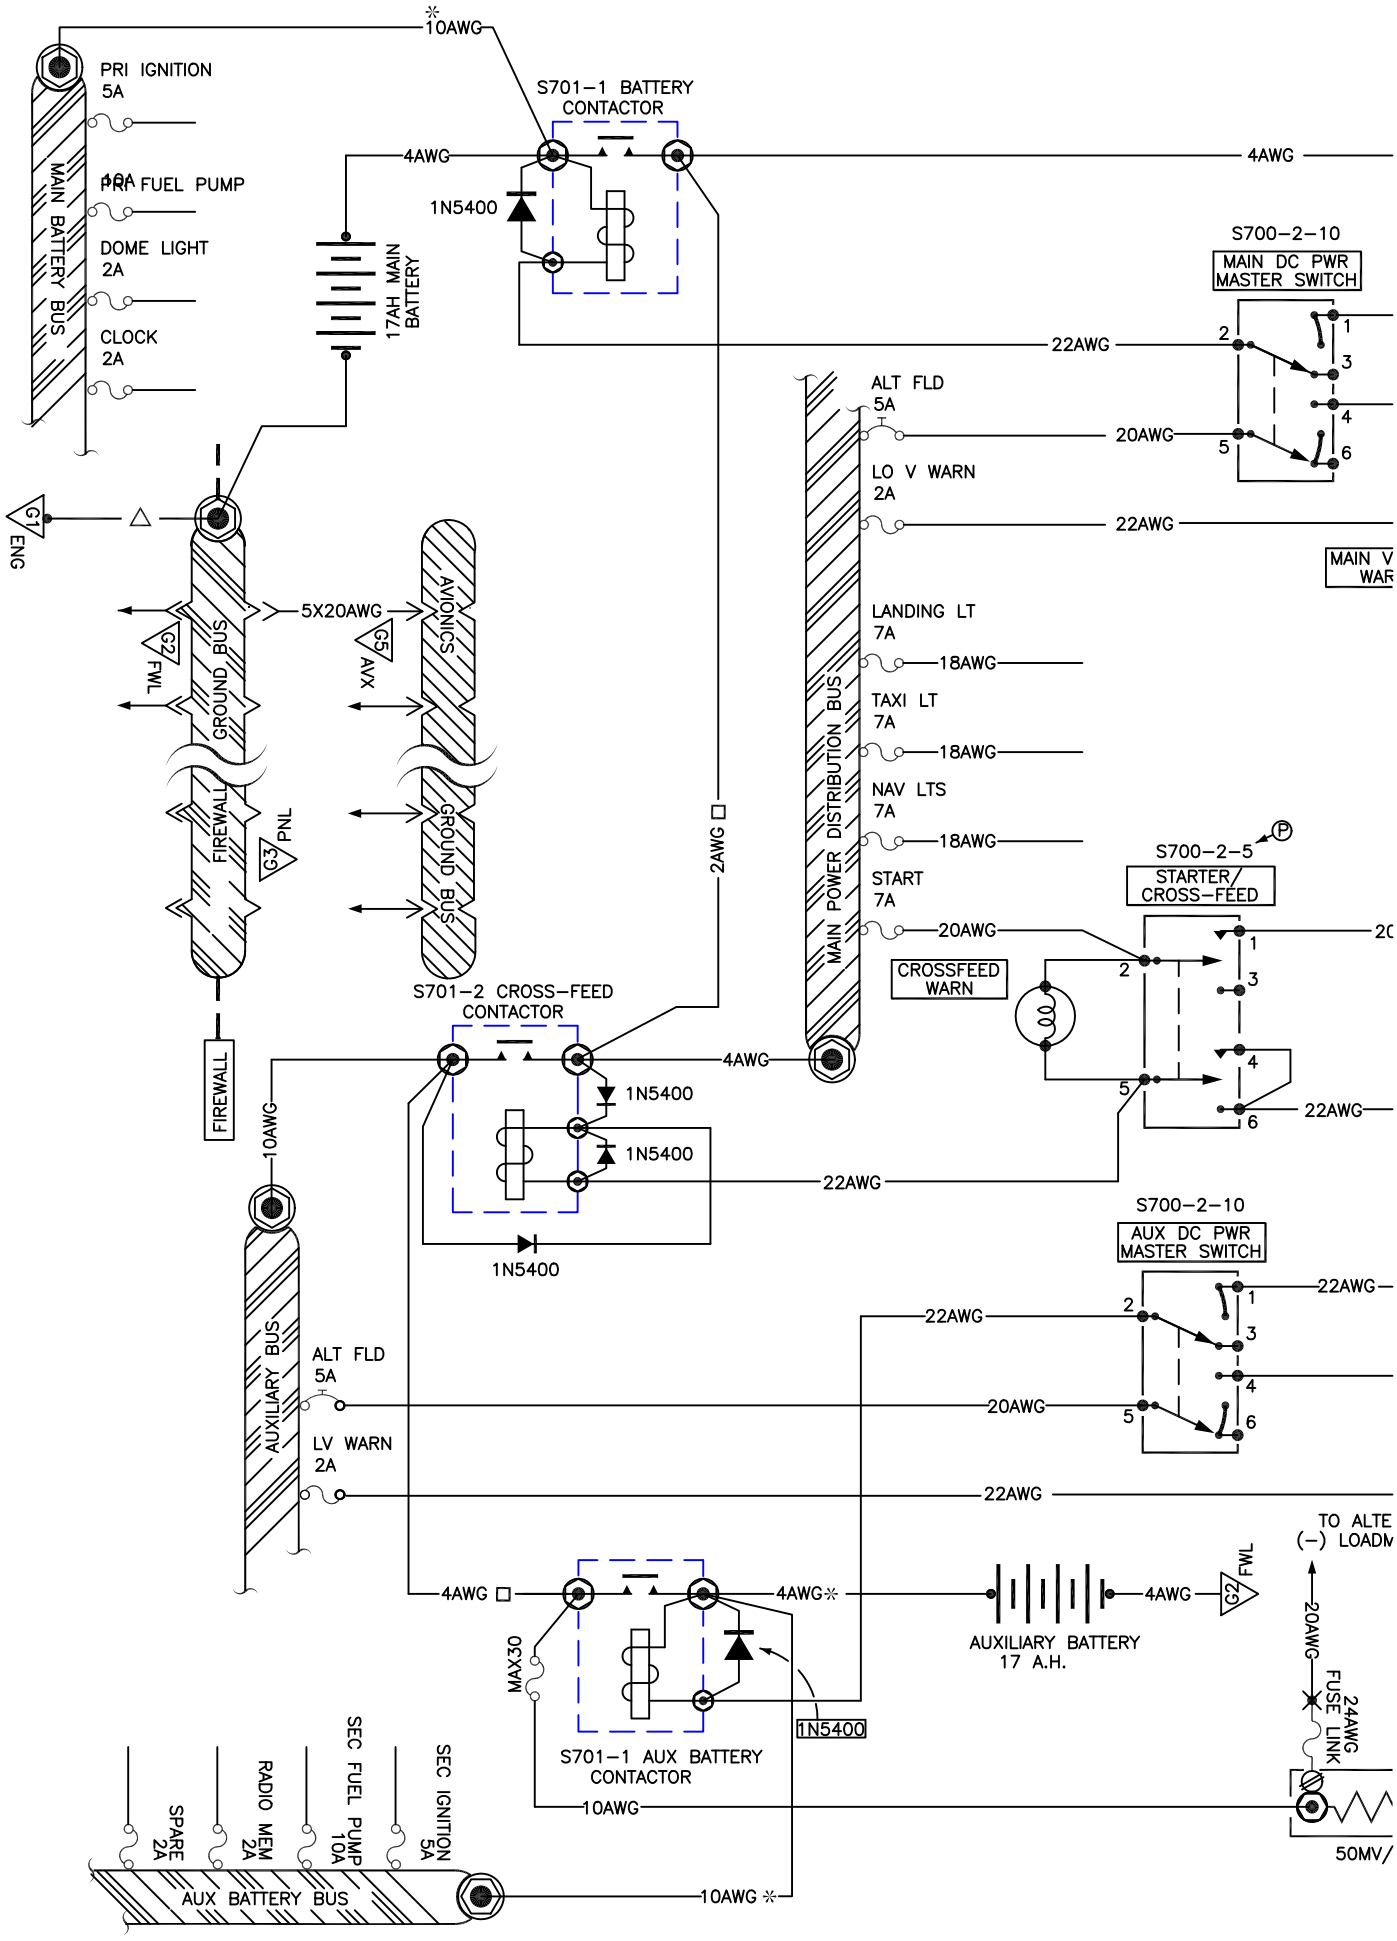
10AWG
PRI IGNITION
5A
MAIN BATTERY BUS
PRI FUEL PUMP
10A
DOME LIGHT
2A
CLOCK
2A
S701-1 BATTERY
CONTACTOR
4AWG
4AWG
1N5400
17AH MAIN
BATTERY
S700-2-10
MAIN DC PWR
MASTER SWITCH
22AWG
ALT FLD
5A
20AWG
LO V WARN
2A
22AWG
MAIN V
WAR
ENG
G1
5X20AWG
G2
FWL
GROUND BUS
AVIONICS
G5
AVX
GROUND BUS
FIREWALL
G3
PNL
LANDING LT
7A
18AWG
TAXI LT
7A
18AWG
NAV LTS
7A
18AWG
START
7A
20AWG
MAIN POWER DISTRIBUTION BUS
2AWG
S700-2-5
STARTER/
CROSS-FEED
CROSSFEED
WARN
S701-2 CROSS-FEED
CONTACTOR
4AWG
1N5400
1N5400
22AWG
1N5400
FIREWALL
10AWG
S700-2-10
AUX DC PWR
MASTER SWITCH
22AWG
22AWG
ALT FLD
5A
20AWG
AUXILIARY BUS
LV WARN
2A
22AWG
TO ALTE
(-) LOADM
4AWG
4AWG
4AWG
G2
FWL
MAX30
AUXILIARY BATTERY
17 A.H.
20AWG
24AWG
FUSE LINK
1N5400
S701-1 AUX BATTERY
CONTACTOR
10AWG
50MV/
SPARE
2A
RADIO MEM
2A
SEC FUEL PUMP
10A
SEC IGNITION
5A
AUX BATTERY BUS
10AWG